 


## OSD MENU

Warning: Please read the this menu carefully before installation and use

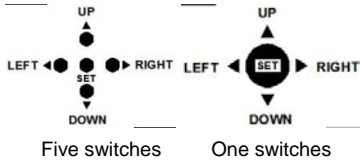 


SET: Push [SET] into Main Menu

UP/DOWN: Move up and down

LEFT/RIGHT: Modify the menu parameters

### 1. Lens

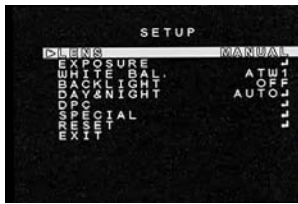

This function is used to adjust the brightness of the screen.

(1). When the SETUP menu is displayed on the screen, select 'LENS' by UP or DOWN button.


(2). Select the type of the lens setting by pressing the LEFT or RIGHT button.

**MANUAL:** When use Manual iris lens for the camera, please select MUNUAL

**DC:** When use DC drive auto iris lens for the camera, please select DC.

**VIDEO:** When use VIDEO drive auto iris lens for the camera, please select VIDEO

### 2. EXPOSURE

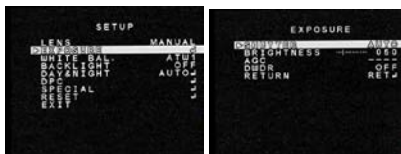 

#### (1). SHUTTER (Condition and Speed Control)

Auto or manual control can be selected.

When the SETUP menu is on the screen, select SHUTTER by the UP or DOWN button.

Select the SHUTTER mode by pressing the LEFT or RIGHT button.

■ **AUTO:** Auto control of the shutter speed is enabled. The shutter speed is controlled automatically according to the brightness of the scene.

2. B/W to Color Settings

■ **FIXED :** Select fixed shutter speed from 1/50, 1/205, /1 5 00,1/2000,1/5000, 1/10000, 1/100000

■ **FLK:** Select 'FLK' mode when flickering occurs on the screen due to the imbalance between illumination and frequency. PAL Model: 1/100, NTSC Model: 1/120.

#### (2). BRIGHTNESS

Adjust brightness from 0-255 grade

Choose RETURN and press the ENTER button when the settings are completed.

#### (3). AGC

Three are four kinds of options, HIGH, MID, LOW, OFF depending on the lightness of surrounding.

#### (4). DWDR.

Two options, ON and OFF

ON: Adjust brightness from 0~63 depending on the lightness of surroundings.

### 3 WHITE BAL(WHITE BALANCE)

(1). Select 'WTIH E ABL' on the SETUP menu by UP or DOWN button.

(2). Select required mode by t eh LEFT or RIGHT button.



Select the modes below

#### 1) ATW(Auto Tracking White Balance) :

This mode can be used within the color temperature range 1800°K~105 00°K ( fluorescent light ,outdoor, sodium vapor lamp etc )

#### 2) MANUAL: Select ATW or AWC first,

Change to manual adjustment mode and press SET button. Set the appropriate color temperature, increase/decrease the red and blue color values and monitor the color changes of the object.

Adjust red from 0~255 grade

 
Adjust blue from 0~255 grade

finishing setting the area, press RETNE button

Select PRIVACY ON and press the ENTER to enter PRIVACY setting

1) **AREA SEL:** You can set 4 privacy areas on the

### 4. BACKLIGHT

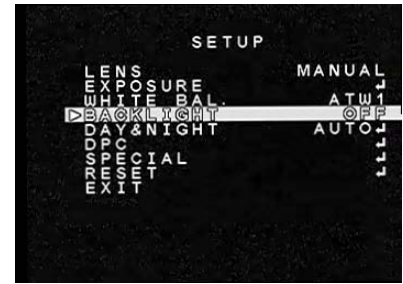

#### (1) BLC ( Backlight Compensation)

When there is a strong backlight behind the object, clear images of the background as well as the object can still be obtained b y using the BACKLIGHT function.

1. Select "BACKLIGHT" on the SETUP menu by UP or DOWN button.

2. Select the value required by pressing the LEFT or RIGHT button.

#### (2).HLC

Adjust level from 0~255 grade

there are two options: night only, all day

### 5.Day & Night

Day & Night Switch is specially designed for different occasions.

There are four kinds of modes as follows:

automatic mode, color mode, B/W mode, and external switch. The user can set different mode according to the surroundings.



#### (1). Color Signal

Set menu to display color or not

1. Color to B/W Settings

When the mode is "external control", user can't adjust it. This is color to B/W accumulated light intensity, when it reach "alternating light" state, camera could be damaged by frequent switch. It might cause to not correct judgment of image and reduction of span life of the device.

left or right mirror can be set when turn on mirror

When the mode is "external control", user can't adjust it. This is B/W to color accumulated light intensity, when it reach "alternating light" state, camera could be damaged by frequent switch. It might cause to not correct judgment of image and reduction of span life of the device.

### 3. Delay Time

This time means when the light begin to alternate another state, the system make it delay a while for ensuring the lights fully in this switching range.

## 6. DPC



Set the black point and white point as auto-completion-point numbers

## 7. SPECISL



### (1). Title background

Set the title background.

### (2). NOITOM

MOTION TRACE OFF

MOTION TRACE OFF

### 1).AREA

Select AREA and press ENTER to enter Motion Area setting, choose the area where you want to set Motion Detection, press ENTER to confirm the area (Once ENTER is pressed, the color of the choosing area will change), repeat this step to choose the other areas. After for 1 second to the below menu.

### (3) PRIVACY

This mode conceals the areas where you don't wish to appear on the screen.

OFF and ON

screen (From Area 0 to area 3). Set dimension of each privacy area by LEFT, RIGHT, TOP and BOTTOM menus below AREA STATE

**2) AREA STATE:** Once area 0-3 is set, select AREA STATE ON to conceal the area on the screen, select AREA STATE OFF to disable privacy function on the screen

**3) LEFT/RIGHT/TOP/BOTTOM:** Set the dimension of each privacy area (area 0-3) by the slider.

**4) COLOR:** Select t the color of each privacy area by slider.

**5) RETRUN:** Return to the pervious menu.

### (4). PARK LINE

OFF: **PARK LINE** mode is disabled.

ON: **PARK LINE** mode is enabled

### (5). ADJ IMAGE



### 1).Lens sharp

OFF and ON

Adjust from 0~255 seconds

### 2). 2DNR

OFF and ON

### 3). Mirror

switch

### 4). FONT COLOR

Adjusted from 0 to 51 seconds

### 5). CONTRASR

Adjusted from 0 to 255 seconds

### 6). SHARPNESS

Adjusted from 0 to 255 seconds

### 7). DISPLAY CRT/LCD

USER

Gamma

Adjust the gamma value, there are several different modes of curves for options, different modes will give different handling way to the bright and dark area of the image. The user should select appropriate mode to achieve the most optimized image on different occasions

## 8). NEG IMAGE

OFF: NEG IMAGE mode is disabled.

ON: NEG IMAGE mode is enabled

## (6). COMM ADJ



### 1).ID

Set camera' address, from 0~255

### 2). Baud rate

Set camera communication speed: 2400, 9600, 14400, 19200, 38400

### 3). Communication protocol

### 4).Display ID

ON and OFF

### 5).ID POS

 
### (7). Language

1). Select "LANGUAGE" by UP or DOWN button.

2). Setting "LANGUAGE" from "English/Chinese" by LEFT or RIGHT button.

### (8).VERSION

## 8. RESET

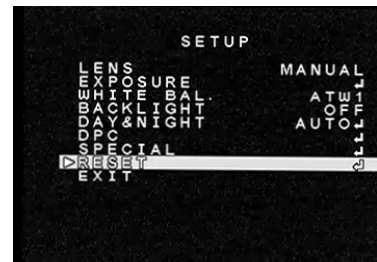

### (1). FACTORY

Return to the camera's initial setting in factory.

### (2). RETURN

### 9. EXIT



Save all the setting menus and exit main menu